

## Graphics Touch Screen Keypad

### Arming/Disarming for Home/Sleep/Away, Home/Away, and All/Perimeter System

#### Arming Home/Sleep/Away, Home/Away, and All/ Perimeter

1. On the Main Screen, press the center of the Shield icon and release.

This displays the Arming Options screen. Depending on which arming system has been programmed, one of the following screens displays:

- Home/Sleep/Away
- Home/Away
- All/Perimeter

2. To select the desired Arming Option press the icon until it glows.




Main Screen Interactive Shield



Home/Sleep/Away Arming Option



Home/Away Arming Option

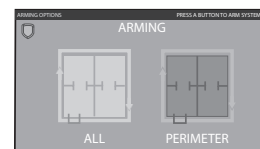

All/Perimeter Arming Option


#### Disarming Home/Sleep/Away, Home/Away, and All/Perimeter System

1. On the Main Screen, press the Shield and release.
2. The screen displays **ENTER CODE:-**. Enter your user code or present your credential to disarm the system.


When the system disarms, **ALL SYSTEM OFF** displays in the upper right corner and the Shield indicates a disarmed status.



Main Screen Interactive Shield

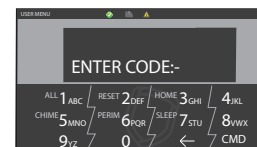

ENTER CODE:- Keypad Display

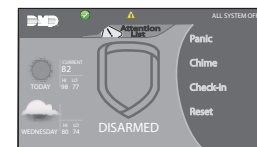

Main Screen with System Status Display

## System Arming/Disarming for Area Systems

### Arming and Area System

1. On the Main Screen, press the Shield to display Keypad.



Main Screen Interactive Shield

2. Press **CMD** until **ARM DISARM** displays on the screen. Choose **ARM**.



ARM/DISARM Keypad Display

3. Enter your user code if required.



ENTER CODE:- Keypad Display

4. Select **NO** to arm only selected areas. Go to step 5. Select **YES** to arm all areas authorized for your user code.




ALL? NO YES Keypad Display

5. If **NO** is selected in step 4, the display begins to list each area to which you have access followed by **NO YES**.

Example: **OFFICE NO YES**.

- 5a. Select **YES** for each area you want to arm.

- 5b. Select **NO** for each area you do NOT want to arm.

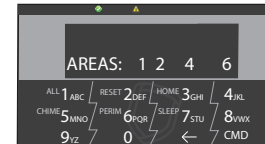

AREAS: Armed Keypad Display

### Disarming an Area System

See System Arming (Area), except Step 2 choose **DISARM** and then choose to Disarm all areas or specific areas in steps 4 and 5.

